

1984 PORSCHE 928

Fuses : Location, Rating, Function & Input Bus

© Alan C Moore 2014

Ceramic Fuse

	Front Fog Lights (Left & Right)	Aux. Highbeams (ROW Only)	License Plate & Underhood Lights	Console & Power Outlet Lights	Power (Cigar) Outlet, Instruments	Wipers, Intensive Washers	Brake Lights, Cruise Control	Sunroof	AC, Backup Light, Mirrors, R-Wiper	Not Used	Instruments, Pod lights, Clock	Instruments & Indicator lamps	Fuel Pump, Aux Air Valve, WUR	Electric Seats	Horns, Rear Wiper Park, Antenna	AC Condenser Cooling Fan	HVAC Blower, Compressor Cutch	Rear Defogger, Mirror Heaters	Headlight Pod Motor	Headlight Washers	Power Windows, Central Lock	Not Used	Interior Light & Hatch Release	Headlights Highbeam Left	Headlights Highbeam Right	Headlights Lowbeam Left	Headlights Lowbeam Right	Marker (Parking) Lights Left	Marker (Parking) Lights Right	Turn Signal Front Left	Turn Signal Rear Left	Turn Signal Front Right	Turn Signal Rear Right	Rear Foglight (ROW only)
	16	16	8	8	16	16	8	16	8	-	8	8	16	25	16	25	25	25	25	25	16	25	-	8	8	8	8	8	8	8	8	8	8	8
						X					15																							
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34

Fuse Output



Fuse Input

Fuse Function

Rating (A)

Input Bus: 30= Batt+, 15= Ignition, X= Accessory

Input Bus

Fuse #

Spare Fuses


< Screw Mounting Tab

Screw Mounting Tab >


Interchangeable Relays

Spare Fuses


Relay Socket Terminal ID

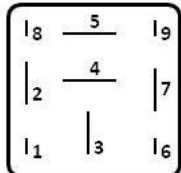

Plug Terminals Y-Z

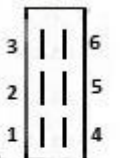


A-H, J-N, O-X

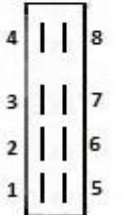

FUSES

RELAYS

CE CONNECTOR PLUGS

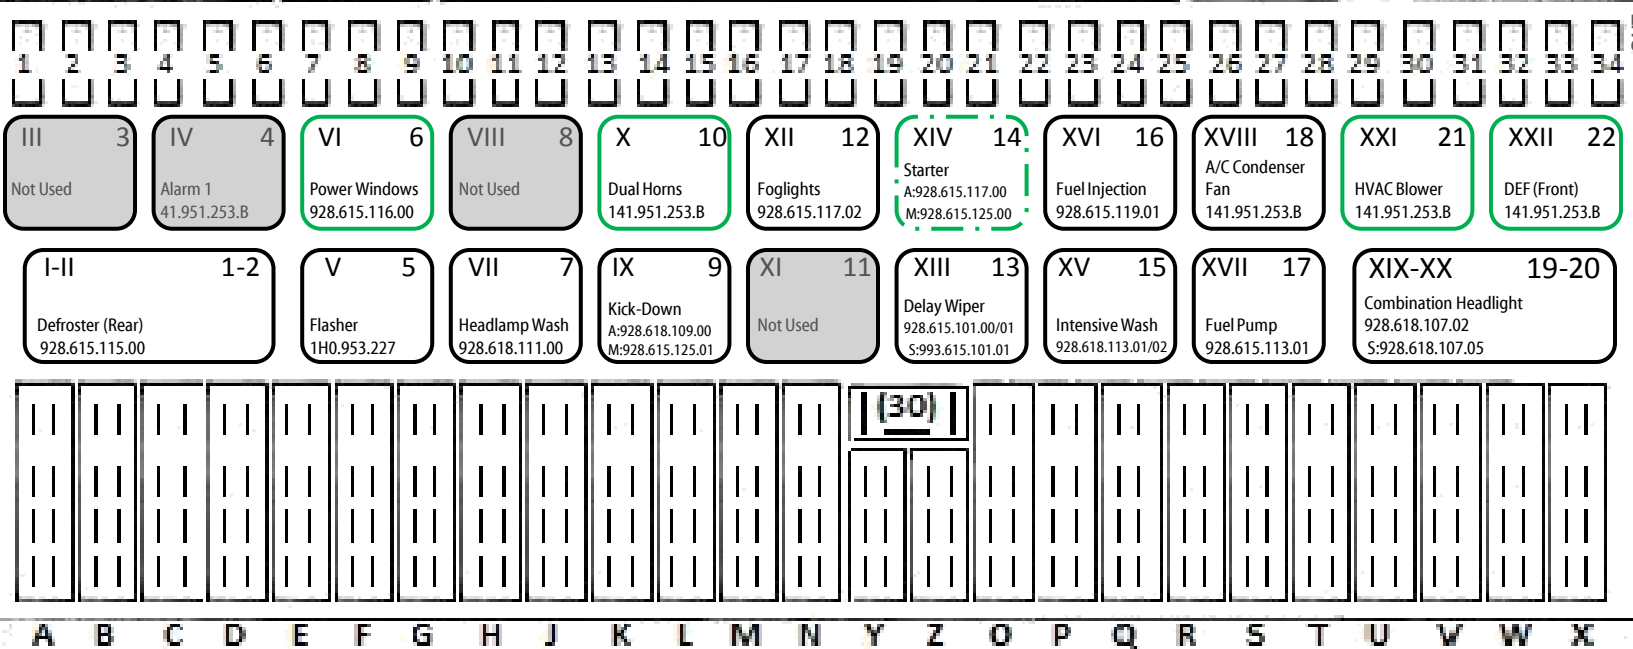

Mounting Tab >

< Mounting Tab