


'87-'88 PORSCHE 928

Fuse Details: Location, Rating, Function & Input Bus

© Alan C Moore 2014

In Circuit Probe Points



X						15										30										Input Bus: 30= Batt+, 15= Ignition, X= Accessory																																																																																																																																																																																		
1	5	Central Locking			6	7.5	HVAC Controller			7	5	Console, Pod Lights, Diagnostics (15)			8	15	Seat Heaters			9	7.5	Telephone (optional)			10	5	Ind./Warning Lamps, Kick Down(A)			11	7.5	Rear Wiper			12	7.5	Backup Lights, Mirrors			13	15	Rear AC (Optional)			14	25	Sunroof			15	30	Power Windows			16	15	ABS controller			17	30	HVAC Blower			18	15	Main Dual Horns, Rear Wiper Park			19	25	Rear Window Defogger			20	30	Electric Seat Left			21	30	Electric Seat Right			22	15	Radio Amplifier			23	7.5	Cooling Flap Motor			24	7.5	Interior Light & Hatch Release Start			25	25	Headlights Washers			26	1	Hatch Release Parking Circuit			27	15	Headlight Pod Motor			28	30	Radiator Cooling Fan 1			29	30	Radiator Cooling Fan 2			30	15	Front Fog Lights (Left & Right)			31	7.5	Headlights Highbeam Left			32	7.5	Headlights Highbeam Right			33	15	Aux. Highbeams L & R			34	5	Turn Signal Front Left			35	5	Turn Signal Rear Left			36	5	Turn Signal Front Right			37	5	Turn Signal Rear Right			38	7.5	Headlights Lowbeam Left			39	7.5	Headlights Lowbeam Right			40	5	Marker (Parking) Lights Left			41	5	Marker (Parking) Lights Right			42	15	Fuel Pump, Oxy Sensor			43	5	License Plate Lights, Underhood Light			44	5	Console & Power Outlet Lights			45	5	Rear Fog Lights (ROW Only)		

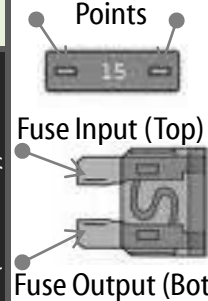

Fuse Function

Rating (A)

Fuse Number

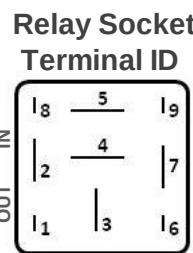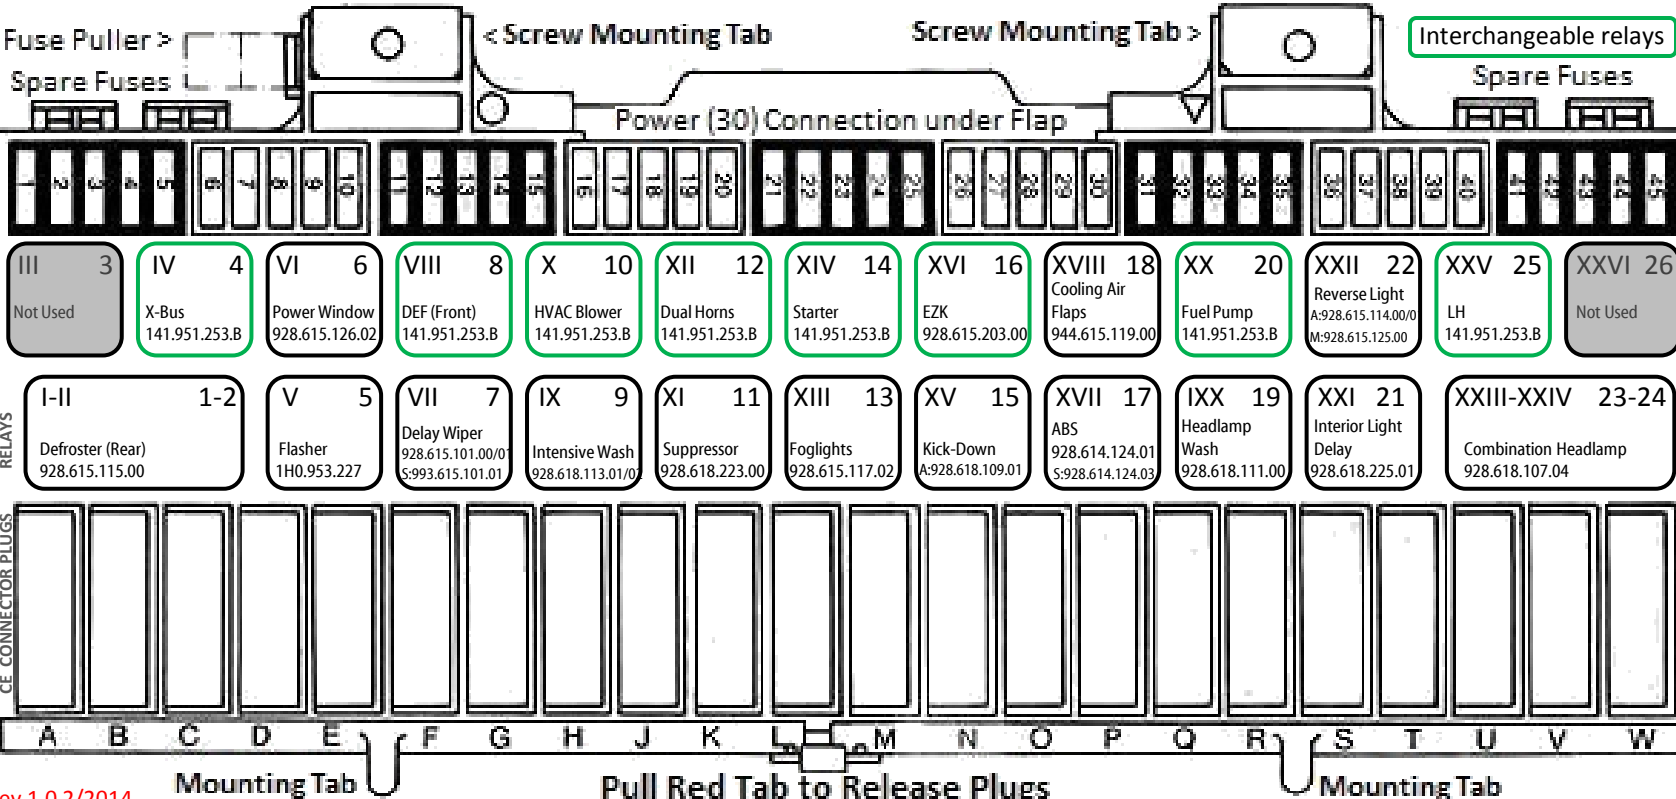

Plug Terminals A-H, J-W

